

“The One That Works” Industrial Air Purifier Maintenance Instructions



Please remove shipping brace from motor.

1



To replace the activated carbon, disconnect the power cord from the wall outlet. Remove the 3 wing nuts and top cover. Pick up the unit at the base and let the granules slide out into a suitable waste container.

3



Replace the activated carbon when you notice an increase of odors in your facility, and/or at least every 4-6 months. It is packaged in a convenient 6 lbs jug with a handle. Each 6 lbs jug has enough activated carbon for one complete change.

5



To clean the foam filter, wash it on a gentle cycle or hand wash, with a mild detergent and cool water. The machine washable dust filter slides off the purifier like a sleeve. Wash the filter approximately once per month. Do not put the filter in the dryer. Let filter air dry for one day.

2



Empty the chamber of all depleted carbon, without shaking the unit.

4



After discarding the used activated carbon, simply snap the funnel provided onto the empty chamber. Pour the granules around the funnel until the unit is full. Replace top cover, and replace the 3 wing nuts.

6

“The One That Works” Industrial Air Purifier Maintenance Instructions



If your unit is equipped with the supplemental activated oxygen, simply increase the setting to oxidize chemical vapors/odors. Fan

speed can also be set on high to increase the purifier capacity. You may experience best results by leaving the fan on low 24 hours per day. Leave activated oxygen setting off at night.

7



If your purifier is provided with supplemental activated oxygen, simply remove top and disconnect the two wires as shown.

The transformer which rests on the metal plate inside the bottom of the machine is attached to the base with velcro. Remove when discarding the contaminated granules, or to clean transformer plates.

The ceramic transformer plates should be removed approximately once per year and cleaned with ammonia / soap and water, or a citrus degreaser. Remove the 5/16” nuts and disconnect wires to remove the ceramic plates. Reconnect wires and nuts.

8



As needed, use Modern Solution’s Lint Roller to remove particulate contamination (dust, powders, lint), from the washable dust filter.

9

Motor Care:

Every 6 months a few drops of good grade automobile motor oil should be inserted into the oil holes. Two oil holes are on each motor: to locate see label on motor.

